




TIMER INSTALLATION AND ADJUSTMENT

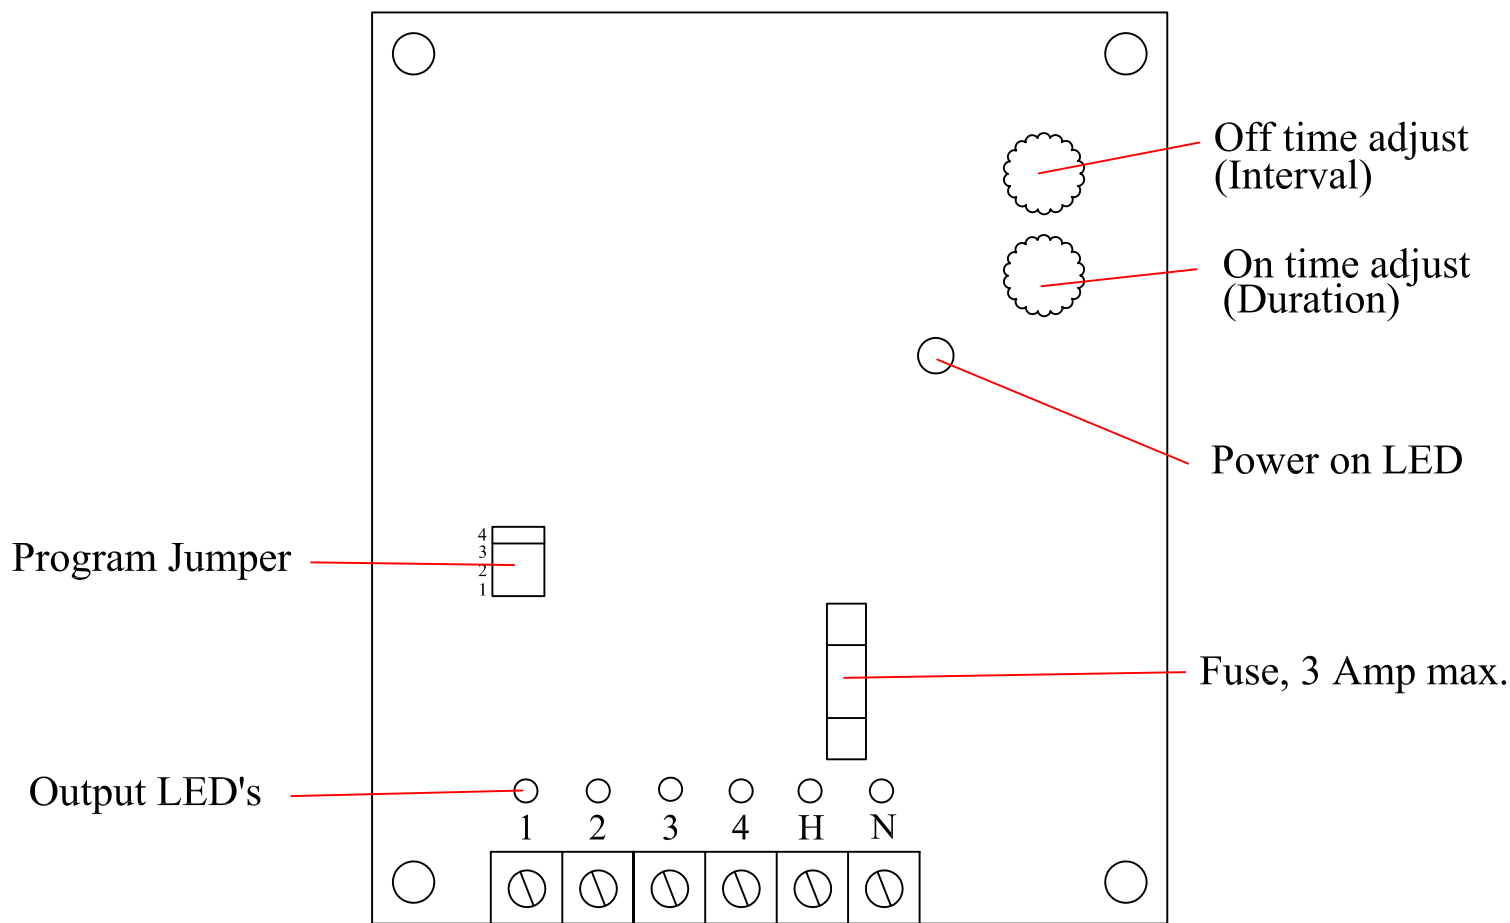

INSTALLATION

1. Mount the enclosure in a convenient location.
2. Connect 115V 50/60 cycle supply to terminal H & N.
Neutral to N, High to H.
3. Connect one wire of each solenoid valve to terminals 1 thru 4 as required. The remaining wire is to be connected to terminal N.

ADJUSTMENT

1. Timer impulses No.1 on, then No. 2, and so on to the last selected output. The number of outputs is determined by the position of the program jumper.
2. Pulse duration and interval are controlled by the on and off time adjust knobs.

SOLIMAR PNEUMATICS
MINNEAPOLIS, MN 55432, USA
TEL: (763) 574-1820, FAX: (763) 574-1822