


Periodic Maintenance Schedule

Maintenance on Solimar Silo Fluidizers is minimal. However, periodic visual inspections should be made to check for wear.

The following inspection should be performed once a year:

- 1) Check for wear on the Fluidizer disk. Disk should seal tightly against the hopper wall. Check for uneven wear on the disk. If it is no longer round along the outside edge, this is a sign of uneven air flow and the disk should be replaced.
- 2) Check to make sure no product has “caked” or hardened beneath the disk. This can be cleaned by removing the disk and stem assembly. Also check to make sure the o-ring on the stem has not been crushed or flattened.
- 3) When reinstalling the Silo Fluidizer, be sure to tighten the nut to the recommended 25 ft. lbs. [35 N m] of torque.

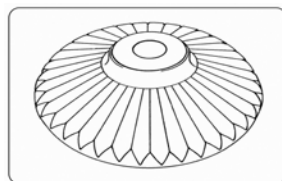

Insist on genuine
Solimar disks with
the trademarked
Radial Ridge Design

Solimar, Solimar – USA and the Radial Ridge Design are trademarks of Solimar Pneumatics

08/08